


BMW 3-Series and Z4 (99-05) Includes 2006 325ci/330ci Coupe and Convertible models Haynes Online Manual.

## 6 Throttle pedal - removal and installation

### Warning:

Once the throttle pedal has been removed, it MUST be replaced. Removal will damage the pedal retaining clips, and if the original pedal is installed, it could work loose, causing an accident.

## Models with a throttle cable (2000 and earlier)

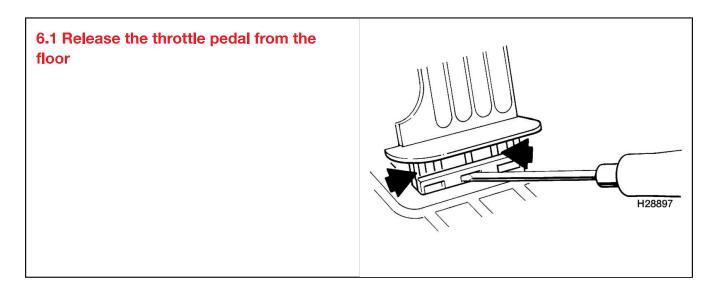

- 2 Engage the new pedal with the throttle cable operating lever.
- 3 Push the pedal down to engage the lower retaining clips with the floor plate. Ensure that the clips snap securely into place.
- 4 Check the throttle cable adjustment as described in Section 5.

# Models without a throttle cable (electronic, 2001 and later)

#### Note:

The accelerator pedal has a pedal position sensor integrated into the assembly. If the sensor fails, the entire assembly must be replaced.

5 Using a flat-bladed screwdriver, depress the retaining clip and slide the pedal assembly towards the center of the cabin (see illustration). Disconnect the wiring connector as the assembly is withdrawn.

6.5 Depress the clip, and slide the pedal assembly towards the center of the cabin



6 To install, reconnect the wiring connector and slide the assembly into the mounting, ensuring that it is correctly located. Two clicks should be heard as the clips engage, and the right-hand side of the assembly should be flush with the side of the mounting.

© 2024 Haynes Manuals, Inc. Contact us