



Haynes
shows you how


BMW 3-Series and Z4 (99-05) Includes 2006 325ci/330ci Coupe and Convertible models Haynes Online Manual.

11 Brake pedal - removal and installation

Removal

- 1 Disconnect the cable from the negative battery terminal (see [Chapter 5, Section 1](#)).
- 2 Remove the brake light switch as described in [Section 18](#).
- 3 Using a pair of pliers, carefully unhook the return spring from the brake pedal.
- 4 Slide off the retaining clip and remove the clevis pin securing the brake pedal to the power brake booster pushrod (see illustration).

11.4 Remove the clip and slide out the clevis pin

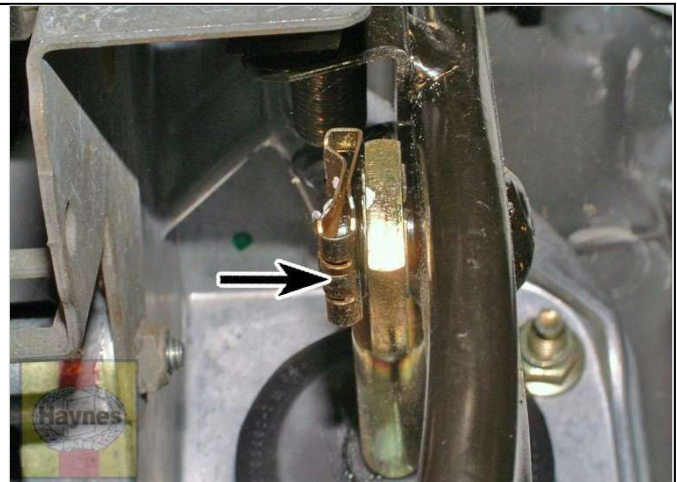

- 5 Slide off the pedal pivot pin retaining clip and remove the pedal from the pivot.
- 6 Carefully clean and inspect all components, replacing any that are worn or damaged.

Installation

- 7 Installation is the reverse of removal. Apply a small amount of multi-purpose grease to the pedal pivot and clevis pin.

