


BMW 3-Series (92-98) & Z3 (96-98) Haynes Online Manual

## 15 Parking brake lever - removal and installation

## Removal

- 1 Remove the rear section of the center console (see Chapter 11) to gain access to the parking brake lever.
- 2 Loosen and remove both the parking brake cable locknuts and adjusting nuts, and detach the cables from the compensator plate.
- 3 Disconnect the wiring connector from the warning light switch then unscrew the retaining nuts/bolts, and remove the lever from the vehicle (see illustration).

15.3 Parking brake lever switch wire (1) and lever retaining bolts (2)

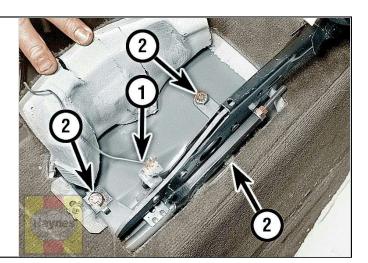

## Installation

4 Installation is a reversal of the removal. Prior to installing the center console, adjust the parking brake (see Section 14).

© 2024 Haynes Manuals, Inc. Contact us