


BMW 3-Series 320i & 320xi (12-14), 325i, 325xi, 330i & 330xi (06) & 328i & 328xi (07-14) Haynes Online Manual

16 Horn(s) - removal and installation

- 1 The horn(s) is/are located behind the left and right ends of the front bumper.
- 2 To gain access to the horn(s) from below, apply the parking brake and raise the front of the vehicle and support it securely on jackstands. Remove the retaining bolts and remove the lower front section of the inner fender liner. Unclip and remove the <u>brake disc</u> cooling duct (where applicable).
- 3 Remove the retaining nut and remove the horn, disconnecting its wiring connectors as they become accessible (see illustration) .



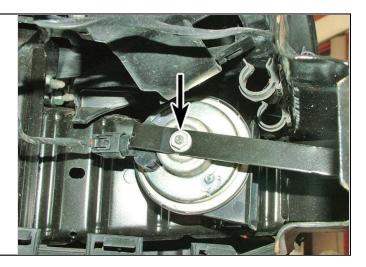

4 Installation is the reverse of removal.

© 2024 Haynes Manuals, Inc. Contact us