


BMW 3-Series and Z4 (99-05) Includes 2006 325ci/330ci Coupe and Convertible models Haynes Online Manual.

## 15 Parking brake lever - removal and installation

## Removal

- 1 Remove the rear section of the center console and armrest (if equipped) as described in <u>Chapter 11</u> to gain access to the parking brake lever.
- 2 Loosen and remove both the parking brake cable locknuts/adjusting nuts, and detach the cables from the lever.
- 3 Unscrew the retaining bolt, and remove the lever from the vehicle (see illustration) .

15.3 Remove the parking brake lever bracket bolt

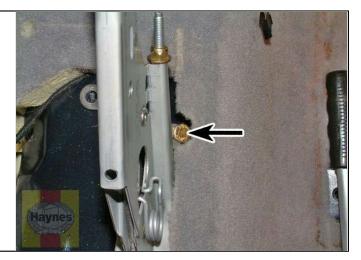

## Installation

4 Installation is a reversal of the removal. Prior to installing the center console, adjust the parking brake as described in Section 14.

© 2024 Haynes Manuals, Inc. Contact us